

SIMPLY COLOURS



CareFlex



Upholstery



Flame Retardant

350,000+
Martindale
Rubs

Abrasion



Waterproof



Indoor &
Outdoor



Anti
Microbial



Stain
Resistant



Phthalate
Free



Heavy Metals
Free

**LATEX
FREE**

*Does not apply
to Simply VP

Simply VP

Vapour Permeable Fabric

Coating PU with a polyester basecloth.

Recommended for contact areas.



Black



Dark Grey

Technical properties

Flame Retardant to Crib 5
Waterproof 2.5 mtrs
Stain Resistant
Anti Microbial
Anti Fungal
Breathable
Multi Stretch

Simply Vibrant



Zest 303
Lemon



Zest 222
Apple



Zest 1175
Turquoise



Zest 438
Tangerine



Zest 608
Fuchsia



Zest 128
Violet



Zest 440
Scarlet

Simply Classic



Zest 858
Cobble



Zest 805
Cream




Zest 906
Ash



Zest 901
Silver



Zest 954
Graphite



Zest 900
Black



Voyage 807
Mushroom

Simply Tranquil



Zest 151
Teal



Zest 155
Duck Egg



Zest 117
Royal



Voyage 105
Indigo



Voyage 624
Mulberry



Zest 444
Cherry



Zest 424
Peony


Simply Patterns




Venture 321
Wheat



Venture 155
Duck Egg Blue

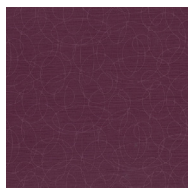

Venture 624
Mulberry

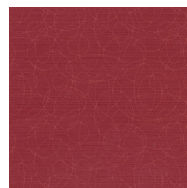


Venture 609
Rose



Etch 837
Stone



Etch 129
Ocean

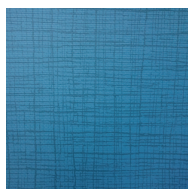

Etch 122
Wedgewood Blue



Etch 664
Maive

Cadet Vinyl Upholstery - Beautiful & Durable

Antimicrobial Shieldplus Protection.

Permanently inhibits the broadest spectrum of microbes (even C. difficile and COVID-19) and prevents nasty odours.

Acryltron™

Affording exceptional, improved resistance to cleaning chemicals.

Polyurethane Coating

For durability and stain resistance.

PVC Core

For core strength and durability.

Substrate

High performance knitted substrate providing a solid foundation.

Composition	Total Weight	Abrasion	Bursting Strength	Waterproof	Antimicrobial	Flammability Ratings					
						BS5852 2006 Ignition Source 5	EN 1021 - 1/2	M2 France	NFPA 260 USA	CAL TB 116 & 117	IMO FTP 2010 Part 8
Coating PVC/PU Blend Basecloth Viscose/Polyester	Approx 800g/m ² +/-5%	350,000+ Martindale Rubs 100,000 Wyzenbeek DR	1738 kPa	Hydrostatic head >20 metre	ISO 18184:2019	BS7176 Medium Hazard					

CareFlex Fabrics

Our range of stylish fabrics are carefully selected to suit a variety of health and care environments. All fabrics are easy to clean and offer high levels of comfort and durability. They are manufactured to be resistant to moisture ingress, and meet Crib-5 fire retardancy standards. Please see our cleaning guide for full details on recommended cleaning. All technical cards and certifications are available upon request please email: info@careflex.co.uk if these are required.

Fixed Covers

Fixed covers give the chair a sharper, minimalist appearance, and are designed to meet the increasing needs of infection prevention and control.

Removable Covers

Our removable covers can be taken off easily for cleaning, or replaced if they are damaged.

Customer Material Choice

As an extra service we can customise the chair with a fabric of choice outside of the standard range. We'll simply supply a quotation for the chosen fabric on request. (Orders are subject to an administration fee).